

The Ultimate Wood Heat



**CLASSIC
EDGE™**
TITANIUM HDX

The FireStar® combustion controller constantly monitors how the wood is burning and adds air where and when it's needed for the cleanest, most efficient combustion.

Coal Bed Saver - saves the coal bed for quick, easy restarts

Burning Time Monitor - helps to estimate when you need to add wood

 
Clean Reload - Reduces smoke when you open the firebox door to add wood

Text Alerts - be notified when it's time to add wood




MyFireStar.com - the FireStar Controller with onboard Wi-Fi, Coal Bed Saver, Burning Time Monitor and Clean Reload keeps you informed of your furnace's performance and operations from anywhere.


When the fire needs a lot of air (such as during startup or when burning higher moisture wood), FireStar instructs the stepper motors to open the air regulating discs precisely to deliver the amount of air needed.

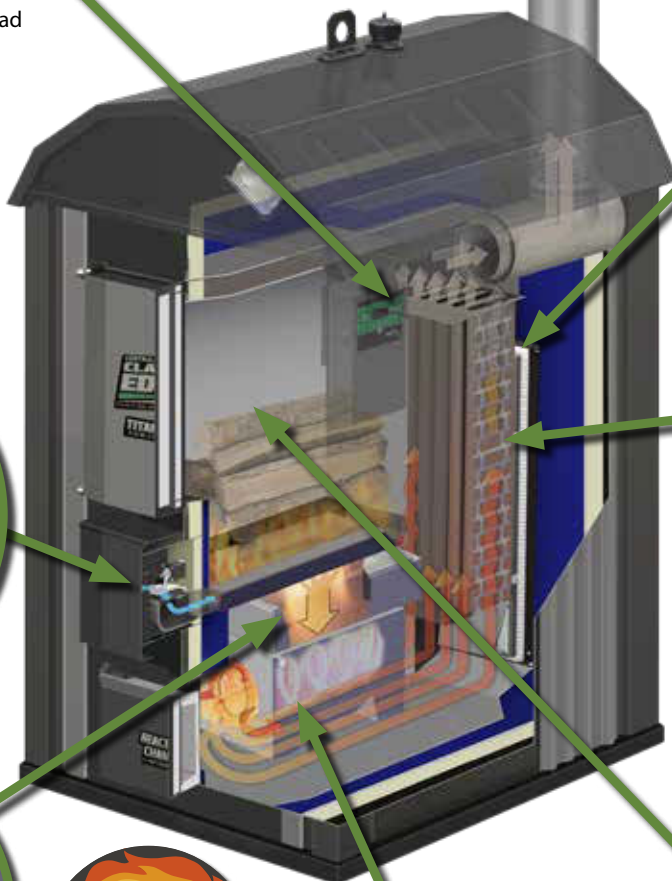

 
The patented vertical Easy View® Heat Exchanger with hinged door provides full access without the use of tools.

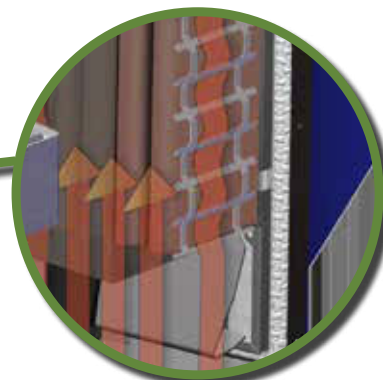

 Turbulators in the heat exchanger cause turbulence of the exhaust gas flow through the exchanger. This forces the heated exhaust to better contact the heat exchanger and transfer more of its energy to the surrounding water jacket before exiting out the chimney.

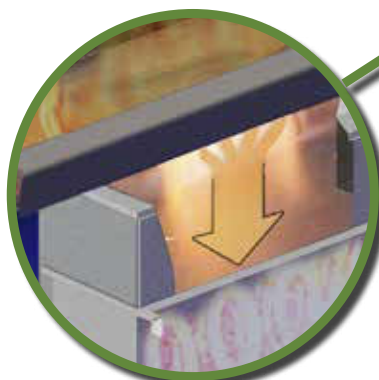

 The patented Air Charge Tube keeps coals from falling into the Reaction Chamber and directs oxygen into the Fusion Combustor. It also helps the furnace to relight faster.

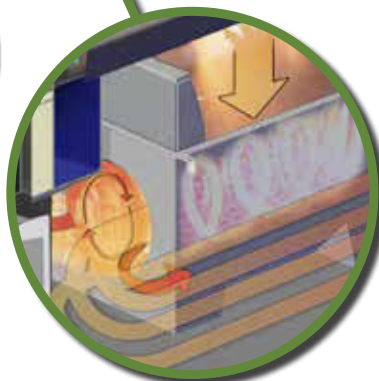

Super-heated gases enter the round chamber of the Afterburner and swirl in a turbulent vortex, creating a **fireball** and allowing enough time for complete combustion to occur.



The Classic Edge's titanium-enhanced stainless steel firebox ensures zero corrosion inside the firebox from high-moisture wood, creosote or condensation.